
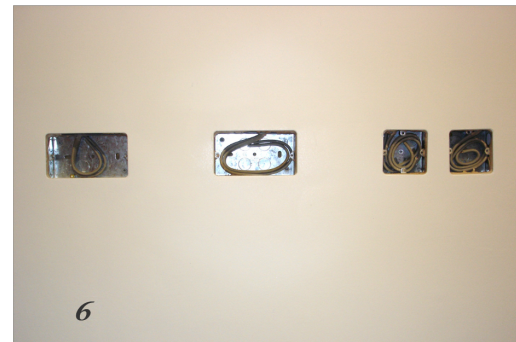
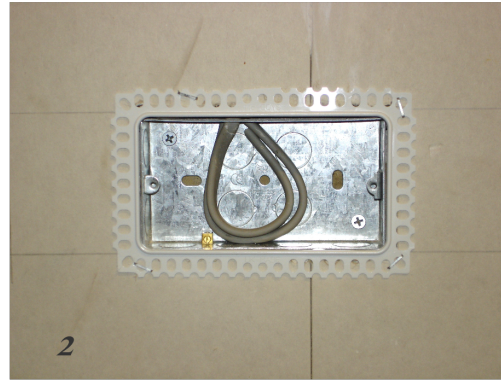


J G McCoy

How To Install: for drywall skim works

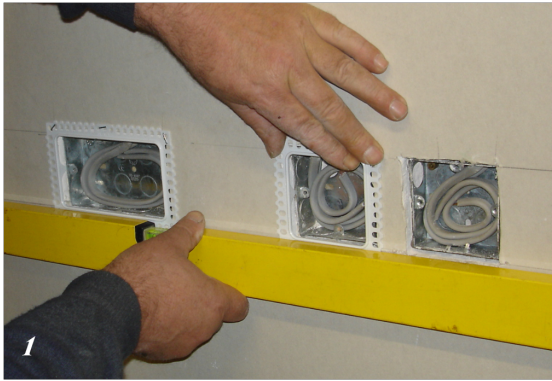

1 Prepare the area and align the box beads.

2 Secure the box bead by positioning it in front of the backing box, so as it lies flat against the plasterboard. (Box Bead should fit loosely) secure the Box bead with staples or an adhesive.


3 Skim the plaster flush against the ridge of the box beads.

4 Remove any excess plaster that may have entered the opening with either your fingers or an edged implement when the plaster is still wet. leave to cure.

5 Once dry, commence decorating

6 SMOOTH, CLEAN CUT FINISH EVERY TIME.

7 Finish by attaching the electrical switch covers.

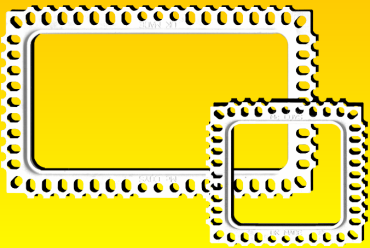


J G McCoy

How To Install: for Re-furbishment works




- 1 Turn off electric supply. Prepare the area for the box bead. Remove the loose bits and chisel back to the strong render coat.
- 2 Pass box bead over the switch cover to make ready for application.
- 3 Dab multifinish around the backing box and prepared area.
- 4 Secure the box bead by setting it against the wet wall to cure.

- 5 Skim the plaster flush against the ridge of the box bead. Remove any excess plaster that may have entered the opening with either your fingers or an edged implement when the plaster is still wet.
- 6 Once the multifinish is dry, give the area a quick rub down with sand paper.
- 7 SMOOTH, CLEAN CUT FINISH EVERY TIME.
- 8 Commence decorating and finish by RE-attaching the electrical switch covers.

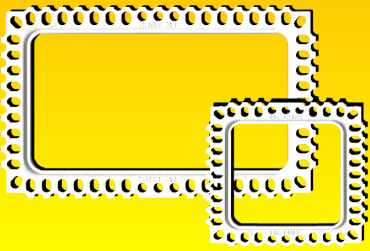

J G McCoy

How To Install: for rough coat render works

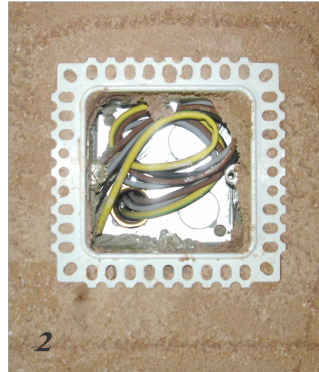

1 Prepare the area and place all wires into the backing box. Align the box bead. Dab multifinish around the Box Bead and then set it against the wet wall.

2 Allow the secured box bead to cure in the wet coat.

3 Skim the plaster flush against the ridge of the box bead.

4 Remove any excess plaster that may have entered the opening with either your fingers or an edged implement when the plaster is still wet. Leave to cure.

5 Once dry, commence decorating on the SMOOTH, CLEAN CUT FINISH.

6 Finish by attaching the electrical switch covers.

UK Manufactured by J G McCoy

Office: 0208 888 4227 / Mob: 0795 2098 069 Website: jgmc coy.com Email: mccoyengineering@gmail.com
European D.R.: 001676743 -0001 to 0004 © Copyright 2016. All rights reserved.