


How To Install: for rough coat render works

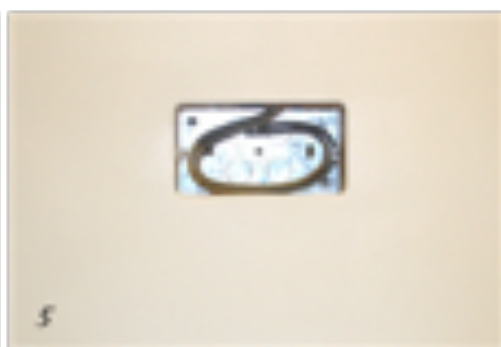

1 Prepare the area and place all wires into the backing box. Align the box bead. Dab multi finish around the Box Bead and then set it against the wet wall.

2 Allow the secured box bead to cure in the wet coat.

3 Skim the plaster flush against the ridge of the box bead.

4 Remove any excess plaster that may have entered the opening with either your fingers or an edged implement when the plaster is still wet. Leave to cure.

5 Once dry, commence decorating on the SMOOTH, CLEAN CUT FINISH.

6 Finish by attaching the electrical switch covers.