

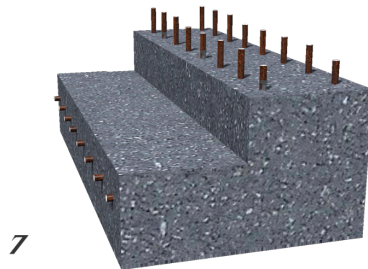
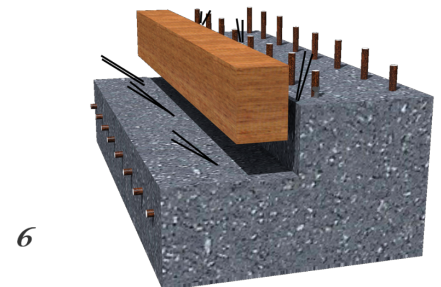
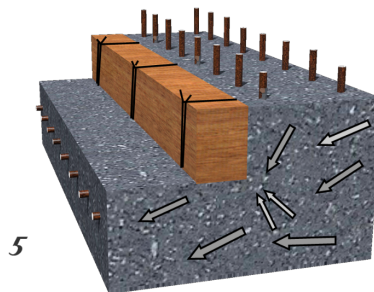
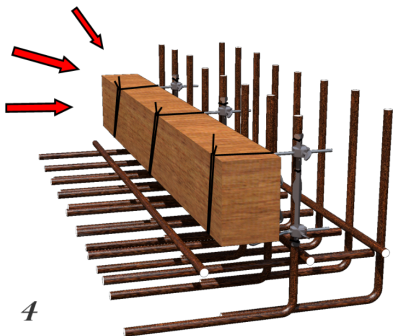
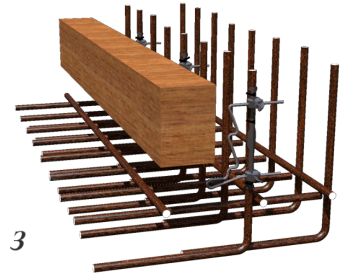


How To Install: McCoy Kicker System

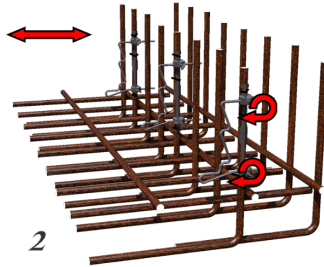

SECURE your STARTER BARS to stabilize the system.

1m centre spacing per bracket

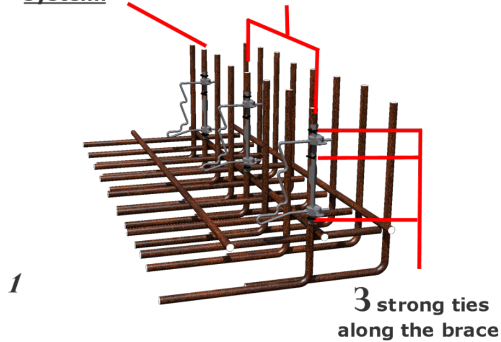

1 SECURE your STARTER BARS to stabilize the system.

tie the bracket to the rebar at your required slab height

2 Loosen thumb screws & slide the wire chair to align bracket to correct width of concrete upstand

Lock wire chair alignment by hand tightening the thumb screws then finish with a half turn on your nips

3 Set timbers onto wire chair

4 Tie a 'loop tie' with the tying wire to pressurise the timber into the bracket

5 You have clear access to pour & poke concrete in preparation for waterproofing systems


6 Cut tying wire to release timbers. Please clean and stack the timbers for re-use.

7 A quality monolithic concrete upstand is formed



J G McCoy

How To Install: The Loop Tie

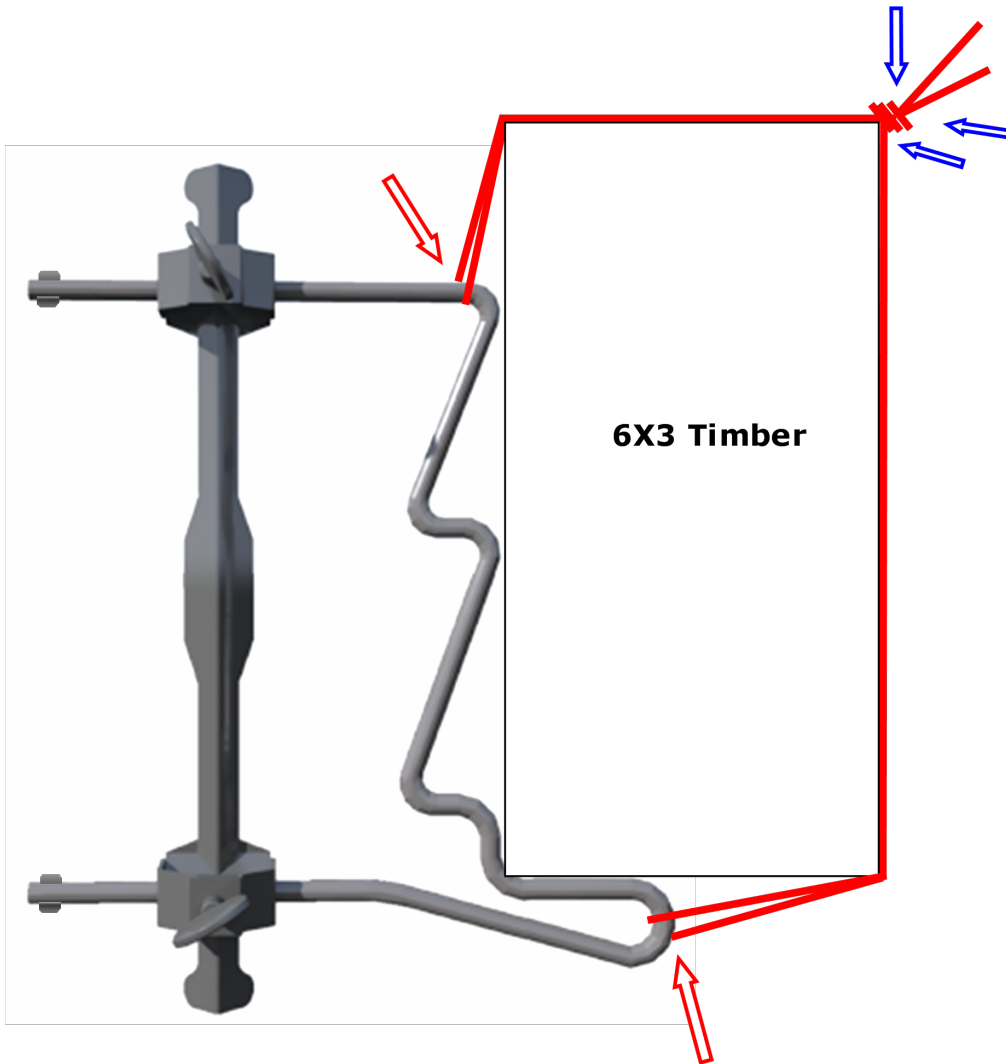

4 A

4A Loop the tying wire around the 5mm wire of the Kicker Bracket. Tying wire pressurises timber into the Kicker Bracket, which secures the whole system